

Care of Sine Equipment



MAGNALOCK
USA

5015 28th Avenue
Rockford, IL 61109
phone (815) 962-8700
fax (815) 398-0285
info@magnalock.com
www.magnalock.com

1. This Sine Equipment is a precision tool. Always handle it with EXTREME CARE.

2. Locking screws in hinge pins must be released before hinging unit.

3. Gauge blocks used in setting desired angle should be left in place to support plate or chuck.

4. Insert shock absorbing material between gauge pins and gauge pads when moving or storing unit.

5. Coat unit with rust preventative when not in use or when exposed to corrosive coolants.

6. To ship unit, use extreme care in packing. Place shock absorbing material between gauge pins and gauge pads. Padding must be secured so it will not become dislodged, and hinge locking screws should be tightened with sine unit in closed position. Follow methods used in original shipment as closely as possible, surrounding entire unit with shock absorbing material and clearly labeling container "FRAGILE".

NOTE: All information is offered in good faith, without guarantee or obligation for the accuracy of sufficiency thereof, or the results obtained, and are accepted at user's risk.